


Problem: How do I attach a new 5-pin connector to the gray cable?

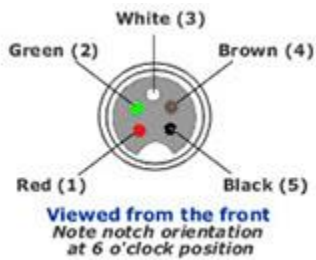

1. Disconnect the two collar screws and the one connector screw.
2. Pull connector apart, exposing the colored wires. The black plastic piece will separate from the silver connector body.
3. Solder wires to the correct pins (see above for instructions and schematic).
4. Wrap rubber sleeve around the gray cable. Position it so that half of its length is inside the silver connector body.
5. Re-assemble the black plastic piece into the connector body.
6. Tighten the one connector screw.
7. Tighten the two collar screws.