


Problem: Some of the colored wires have broken from the 5-pin connector that plugs into the readout console.

If you are not experienced in soldering small wires, we highly recommend you seek assistance from someone who is experienced.

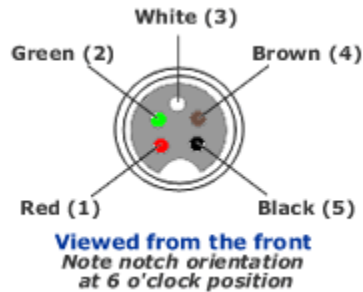

1. Match wire colors to the numbered holes on the connector. Make sure notch in the black plastic is at the 6 o'clock position before beginning.
2. Carefully solder the wires to the pins as shown in wiring diagram. Do not hold iron on pins for an extended period of time.